

Spreader Settings



SPREADER SETTINGS

(SGN 240 STANDARD)

	Ground Logic	Permagreen	LESCO	LT Rich	Vicon/LESCO Pendulum	Lely	Anderson's AccuPro	Anderson's SR-2000	Craftsman	Cyclone	Earthway	Ortho	Scott's AccuGreen 1000	Scott's AccuGreen 3000	Scott's Easy Green	Scott's EdgeGuard DLX	Scott's EdgeGuard Mini	Scott's R8-A	Scott's SpeedyGreen 1000	Scott's SpeedyGreen 2000	Scott's SpeedyGreen 3000	Spyker	Vigoro 4300
SPREADER SETTINGS	3	11	11	3	16	3	K	K	**	3	13	**	**	**	**	**	**	H 1/2	**	**	**	3	4 1/2
	3 1/4	12	12	3 1/4	18	3 1/4	K 1/4	K 1/4	2	3 1/4	13 1/4	2	6 1/2	6 1/2	25	4	4	I	4	5	4	3 1/4	5
	3 1/2	13	13	3 1/2	20	3 1/2	K 1/2	K 1/2	2 1/4	3 1/2	13 3/4	2 1/4	7	7	25 1/2	5	5	I 1/2	5	6	5	3 1/2	5 1/2
	4	14	14	4	24	4	L	L	2 1/2	4	14 1/2	2 1/2	7 1/2	7 1/2	26	5	5	J	5	6	5	4	6
	4 1/4	15	15	4 1/4	28	4 1/4	M 1/4	M 1/4	3	4 1/4	15 1/2	3	8	8	26 1/2	6	6	J 1/2	6	7	6	4 1/4	6 1/2
	4 1/4	16	16	4 1/4	30	4 1/2	M 1/2	M 1/2	3 1/4	4 1/4	16 3/4	3 1/4	8 1/2	8 1/2	27	6	6	K	6	7	6	4 1/4	7
	4 1/2	17	17	4 1/2	32	4 3/4	N 3/4	N 3/4	3 1/2	4 1/2	17 3/4	3 1/2	9	9	27 1/2	6 1/2	6 1/2	K 1/2	6 1/2	7 1/2	6 1/2	4 1/2	7 1/2
	4 3/4	18	18	4 3/4	34	5	O 1/4	O 1/4	4	4 3/4	18 1/4	4	9 1/2	9 1/2	28	7	7	L	7	8	7	4 3/4	8
	4 3/4	19	19	4 3/4	36	5 1/4	O 3/4	O 3/4	4 1/2	4 3/4	18 3/4	4 1/2	10	10	28 1/2	7 1/2	7 1/2	L 1/2	7 1/2	8 1/2	7 1/2	4 3/4	8 1/2
	5	20	20	5	38	5 1/4	P 1/4	P 1/4	**	5	20	**	**	**	**	**	**	M	**	**	**	5	**
	5	21	21	5	40	5 1/2	P 3/4	P 3/4	**	5	20 3/4	**	**	**	**	**	**	M 1/2	**	**	**	5	**
	5 1/4	22	22	5 1/4	42	5 3/4	Q 1/4	Q 1/4	**	5 1/4	21 1/2	**	**	**	**	**	**	N	**	**	**	5 1/4	**
	5 1/4	23	23	5 1/4	44	6	Q 3/4	Q 3/4	**	5 1/4	22	**	**	**	**	**	**	N 1/2	**	**	**	5 1/4	**
	5 1/2	24	24	5 1/2	46	6 1/2	R	R	**	5 1/2	23	**	**	**	**	**	**	O	**	**	**	5 1/2	**

** = No information available

Labeled settings are approximate and should be used only as a starting point. Many factors can influence product delivery rate including but not limited to: operator walking speed, maintenance history of spreader, weather conditions, etc.